

PRC-2200 Quick Reference

KB2VTL

Frequency	FRQ enter frequency (0 first below 10) then ENT
Mode	PROG PROG ENT then PROG until desired then ENT
SSB/CW	MODE until desired then ENT
Squelch	SQ until desired then ENT
Light	LITE until desired then ENT
Antenna	PROG PWR ENT then PROG until desired then ENT
Power	PWR until desired then ENT
Channel	(KB) PROG PROG PROG ENT channel number then ENT
Chan to M	(M) PROG PROG PROG ENT channel number then ENT
Status	STAT to step through all parameters
Split RX/TX	PROG FRQ ENT then PROG until desired then ENT
Load split	Program channel pairs: 10/11, 12/13, 14/15, 16/17, 18/19
Split ops	Select chan (10-19) for Rx, other of pair will be Tx