

## WJ-8617B / WJ-8618B Supplement Manuals

<b>A</b>	<b>SMO</b>	<b>Spectrum Monitor Output</b>	<b>A</b>
<b>B</b>	<b>FE FEX</b>	<b>Frequency Extender</b>	<b>B</b>
<b>C</b>	<b>DRD</b>	<b>Digitally Refreshed Display</b>	<b>C</b>
<b>D</b>	<b>488</b>	<b>IEEE-488 Remote Control Interface</b>	<b>D</b>
<b>E</b>	<b>ASO</b>	<b>Audio Scan Output</b>	<b>E</b>
<b>F</b>	<b>WBO</b>	<b>Wide Band Output</b>	<b>F</b>
<b>G</b>	<b>SSB</b>	<b>Single Sideband Demodulator</b>	<b>G</b>
<b>H</b>	<b>NRT</b>	<b>Noise Riding Threshold</b>	<b>H</b>
<b>I</b>	<b>LOGV</b>	<b>60 dB Log Video</b>	<b>I</b>
<b>J</b>	<b>RLOG</b>	<b>Record Logging</b>	<b>J</b>
<b>K</b>	<b>HFE/LFE</b>	<b>High/Low Frequency Extender</b>	<b>K</b>
<b>L</b>	<b>BITE</b>	<b>Built In Test Equipment</b>	<b>L</b>
<b>M</b>	<b>RTC</b>	<b>Real Time Clock</b>	<b>M</b>
<b>N</b>	<b>DFC</b>	<b>Direction Finder Control</b>	<b>N</b>
<b>O</b>	<b>VBFO</b>	<b>Variable Beat Frequency Oscillator</b>	<b>O</b>
<b>P</b>	<b>ISB</b>	<b>Independent Sideband</b>	<b>P</b>
<b>Q</b>	<b>PKC</b>	<b>Pluggable Keyboard Control</b>	<b>Q</b>
<b>R</b>	<b>232</b>	<b>RS-232 Remote Control</b>	<b>R</b>
<b>S</b>	<b>IF Amplifier and Demod Bandwidth Options</b>		<b>S</b>
<b>T</b>	<b>PSM</b>	<b>Panoramic/Sector Marker Display</b>	<b>T</b>
<b>U</b>	<b>Fan Attachment/Chassis Slides Options</b>		<b>U</b>